



PRECISION-6 PRO Auto Turbine Instruction Manual



Table of Contents

1	Safety.....	3
2	TrueHVLP™ Spray Finishing System.....	5
2.1	How Your HVLP Turbine System Works	5
2.2	How Your Spray Gun Works.....	5
2.3	Preparing to Use Your HVLP Turbine System.....	6
2.4	Familiarize Yourself with Your True HVLP™ Turbine Spray Gun.....	6
2.5	Get to Know Your Turbine	6
3	Apollo Turbine Model Precision-6 PRO.....	7
4	Know Your Coatings	8
4.1	Coating Properties.....	8
4.2	Your Choice of Coatings and Viscosity	9
5	Record of Turbine Use.....	10
6	Record of Turbine Maintenance	10
7	Turbine Maintenance and Cleaning	11
7.1	Pre-Filter Maintenance	11
7.2	Filter Maintenance.....	11
7.3	IMPORTANT Brush Maintenance.....	12
8	Running Multiple Spray Guns with A Turbine.....	13
9	Warranty	14

1 Safety

Read all instructions and safety precautions before operating the unit.

⚠ DANGER

Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

⚠ CAUTION

Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a situation that could result in damage to the equipment or other property.

⚠ WARNING

Risk of fire or explosion! Solvent and paint fumes can explode or ignite, causing severe injury and property damage.

Paints and solvents containing HALOGENATED HYDROCARBONS can react explosively with aluminum. Always check the product's label before using these materials in the unit.

Hazardous vapors: Paint, solvents, insecticides and other materials may be harmful if inhaled, causing severe nausea, fainting or poisoning.

Make sure the room is well ventilated. Avoid all ignition sources, such as static electricity, sparks, open flames, hot objects, sparks from connecting and disconnecting power cords, and working light switches.

Follow the material and solvent manufacturers' safety precautions and warnings. Do not use liquids with flash points less than 100° F (38° C).

Static electricity can be produced by HVLP spraying. Make sure any electrically conductive object being sprayed is grounded to prevent static sparking. The sprayer is grounded to prevent static sparking. The sprayer is grounded through the electrical cord.

Use a respirator or mask whenever there is a chance that vapors may be inhaled. Read all instructions with the mask to ensure that the mask will provide the necessary protection against the inhalation of harmful vapors.

Do not carry the turbine while spraying.

Keep the turbine at the maximum distance from the spraying area.



NOTICE

- Tipping the spray gun causes the spray gun to clog. Dried spray material also clogs the pressure delivery tube and fittings. The spray gun does not function when clogging occurs.
- When not in use, be sure to disconnect the hose and place the spray gun into the Handi-Hold™ Docking Station on the turbine to avoid tipping.

▲ DANGER

Improper installation of the ground plug can result in the risk of electrical shock. If repair or replacement of the plug or cord is necessary, do not connect the ground wire to either flat blade terminal. The wire with green insulation (with or without a yellow stripe) is the grounding wire.

1. For any question regarding proper installation of the ground plug, consult a qualified (licensed or certified) electrician.
2. Do not modify the plug provided. If the plug does not fit the outlet, have the proper outlet installed by a qualified electrician.
3. This product is for use on a nominal 110-volt circuit and has a grounding plug that looks like the plug in Figure 2. Make sure that the product is connected to an outlet having the same configuration as the plug. Do not use adapters with this product.
4. If an extension cord is required, use only a three-wire extension cord that has the same configuration as the unit cord, including the (round) ground terminal. Make sure that the extension cord is plugged into a properly grounded receptacle.
5. When using an extension cord, be sure it is in good condition and heavy enough to meet the specifications in the chart below. If an extension cord is needed the following wire sizes must be used.

25' cord (7.62m).....	10, 12, or 14 Gauge
50' cord (15.24m).....	10 or 12 Gauge
100' cord (30.48m).....	10 Gauge

Grounding instructions for all countries using a 2 pronged plug configuration.

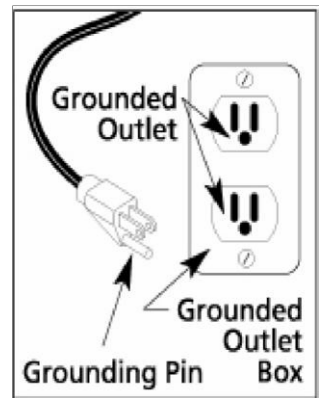


Figure 2

▲ CAUTION

This product must be properly grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an alternate path for the electrical current.

This product is equipped with a cord that has a ground wire and an appropriate ground plug. Plug the unit into an outlet that is properly installed and grounded in accordance with local codes and ordinances.

Safety Note: Users in countries in continental Europe and Australia and anywhere that offers a two pronged plug must be aware that this configuration does not provide grounding.

c2 TrueHVLP™ Spray Finishing Systems

CONGRATULATIONS!! You've just purchased the finest HVLP air turbine system available, and you are about to enjoy the great benefits of Apollo TrueHVLP™ technology. Our designs are the result of many years' experience in the manufacturing of HVLP turbine systems, and HVLP spray guns. We have painstakingly worked and consulted with professional spray finishers to bring you this versatile, precision engineered tool.

Whether you are new to spray finishing, you have spray finished before, or are just new to HVLP spraying; there are some basic spray finishing guidelines that will help you to achieve the best results and optimum success from your new equipment. Reading this information carefully and following these simple steps will ensure that you get the best performance and results from your new TrueHVLP™ spray system.



Check the contents of your box. The following are included:

- (1) PRECISION-6 PRO Turbine Unit
- (1) B7600 "The AtomiZer" TrueHVLP™ Spray Gun
- (4) Nozzle / Needle sets
- (2) Air caps
- (1) 32' Air Hose
- (1) Deluxe Cleaning Kit
- (1) Electric Cord
- (1) Blow-Off Tool
- (1) Viscosity Cup
- (3) Quick Couplers (2x Handi-Hold™)
(1x Hose Coupler)
- (1) Wrench / Spanner
- (1) Spray Gun Lube
- (1) Instruction Manual

2.1 How Your HVLP Turbine System Works

Your turbine system has three components: (1) the turbine unit, (2) spray gun and (3) air hose. The turbine unit, when connected to the correct electrical power supply and with the on/off switch in the "on" position, provides a continuous source of clean, warm, dry, High Volume Low Pressure (HVLP) air. The air hose connects the turbine unit to the spray gun. Air flows through the hose to the nozzle of the specially designed TrueHVLP™ spray gun. Atomization of the coating is achieved when the air mixes with the stream of fluid passing through the tip/nozzle. This low-pressure atomization principle achieves minimum misting (overspray) to the spray environment.



2.2 How Your Spray Gun Works

The 7600 Series spray guns are non-bleeder style. When the turbine blower is turned "on", air will only flow through the air cap when the trigger on the spray gun is activated or pulled back. Air also flows through the air feed tube to pressurize the cup and deliver fluid to the tip/nozzle. When the paint flow screw is opened and the trigger pulled back, fluid flows through the tip/nozzle mixing with the air flow delivered from the air cap and projects a fine atomized mist to your work piece. Spray pattern control will vary depending on the spray gun model. Consult your individual spray gun manual for detailed operation and maintenance of your spray gun.

2.3 Preparing To Use Your HVLP Turbine System

Connect the air hose to the turbine. Pull back the spring loaded quick disconnect coupler and insert the male connector on the air hose into the turbine connector. Release the ring. Your air hose will be locked into place. To release the air hose, pull back on the spring loaded quick coupler ring with your fingers and pull. Connect other end of hose to spray gun using this same procedure. Plug power cord into an outlet that is properly installed and grounded in accordance with local codes and ordinances.

NOTICE

Do not cover or enclose the turbine. It is important to draw cool/ambient air through the unit for optimum performance. Avoid placing the turbine in a warm environment or in direct sunlight. Do not spray in ambient temperatures above 90 degrees. If you want to be able to spray in hotter temperatures, we recommend placing a fan in front of your turbine to help it pull in cool air.

2.4 Familiarize Yourself with Your True HVLP™ Turbine Spray Gun

Refer to your Spray Gun Instruction Manual for information, setup and operation of your model spray gun. You are now ready to spray your coating of choice on your work piece. Good quality results with your TrueHVLP™ spray finishing equipment are a combination of careful preparation of your project, a proper spraying environment, a basic knowledge of the coatings you will be using and how these coatings work with your TrueHVLP™ spray equipment.

▲ CAUTION

Pressure will remain in the spray cup when unit is off. If you pull the trigger back, a stream of fluid will flow. To prevent accidents, turn material flow screw clockwise until it is completely closed. The trigger is now locked in the closed position.

NOTICE: *It is not necessary to empty and clean your spray gun when you pause between applications. Be sure, however, to clean your spray gun thoroughly at the end of your work session. Do not leave material in your spray gun overnight. Extra caution must be taken when spraying coatings that have a catalyst or hardener added. These coatings can harden in your spray gun quickly, making cleaning difficult or impossible. Read manufacturer's coating instructions as to how much time you have before catalyst/hardener begins to set up.*

2.5 Get To Know Your Turbine

Handi-Hold™ Spray Gun Docking Station

Every Precision-6 PRO turbine comes equipped with the Handi-Hold™ Spray Gun Docking Station (A), Apollo's smart innovation. Store, hold or transport your spray gun in a vertical position with no risk of it falling over. Ready to spray when you are. Disconnect hose from spray gun and insert coupler into the Handi-Hold™ Spray Gun Docking Station (A), as shown.



3 Apollo Turbine Model Precision-6 PRO

The model Precision-6 PRO is the newest Precision Series turbine system by Apollo Sprayers International, Inc. Apollo's Precision Air Control Technology (PACT) allows you to control the air pressure from the turbine to within 1/10th of a PSI. Besides the ability to control your air supply the P6 model also has built in filter warning, overheat control and a digital hour meter. The Precision-6 PRO comes supplied with one spray gun and a 32' air hose.

In order to operate the Precision-6 PRO you have to connect the air hose and spray gun. The turbine will not operate correctly without back pressure to the motor, which means the spray gun and air hose need to be connected. The Precision-6 PRO is NOT compatible with "Bleeder" style spray guns. Pull back the ring on the female quick connect located on the turbine and push the male end of the air hose into it, then release the ring. Pull back the ring on the female quick connect on the hose and push it onto the male connector at the bottom of the spray gun handle. Your system is now connected. Put some paint in the cup and you're ready to spray.

To control the air pressure on the Precision-6 PRO turbine, connect the spray gun and air hose with the turbine. Plug the turbine into the appropriate voltage for your model. It is a good idea to turn the pressure to the "Hour Meter" position to start. Once you have rotated the dial to the "Hour Meter", push the ON/OFF switch to the ON position. The factory has calibrated your turbine motor for the maximum spraying output pressure possible with the high power 6-stage motor. To get an accurate stable spraying pressure it is advised that you let the turbine warm up for about 5-10 minutes before spraying. Once the turbine motor is warm the LCD will give you an accurate pressure reading to 1/10th PSI and hold it there until you turn it off.

In order to get the most motor longevity out of your motor it is important to understand the difference between static or sealed pressure vs. flow pressure. When setting the turbine pressure for spraying you should always set the "flow" pressure, this is the pressure when you are pulling the trigger on the spray gun. You can set the flow pressure by connecting the spray gun and turning the system on. Turn the material flow screw on the spray gun clockwise until it stops. This will prevent you from accidentally releasing any material in the cup. You only need to release the air pressure from the spray gun, not the material in order to set the flow pressure. This is why it is preferable to set the pressure without any material in the cup. Pull the trigger and release the air from the spray gun. While continuing to pull the trigger, adjust the pressure on the turbine to the spraying pressure of your choice. **NEVER** just turn the pressure all the way to Max. This will make the motor try to give you maximum sealed pressure, which will only create more heat and reduce the life of your motor. The MAX spraying pressure with the PRECISION-5 is approximately 7.2 PSI depending on the motor, some are a little less. Therefore, when setting the MAX pressure rotate the pressure control until the pressure does not increase any more with the trigger pulled, this is usually about 2-3 o'clock on the dial. Once you have set the pressure, release the trigger. The pressure will stay where you set it. Pull the trigger again and watch the LCD screen. You will notice the air pressure drop and then go back to where you set the pressure. This will work for any pressure setting. **NEVER** set the turbine at full power with the trigger not pulled. This will not give you any additional spraying pressure and will only overwork and possibly overheat your turbine motor when not being used.

The control board will automatically adjust the motor speed to compensate for barometric pressure and elevation. The pressure reading will always be extremely accurate. To decrease the pressure from the maximum setting simply turn the knob underneath the LCD pressure display counter-clockwise, toward "MIN". To increase the pressure once reduced, turn the knob clockwise, toward "MAX". As you turn the knob, the pressure will increase or decrease accordingly. The scale behind the knob is there only to indicate the direction to increase and decrease the pressure. The scale does not represent any settings for the air pressure.

The viscosity of the coating you want to spray will determine the amount of pressure needed. The thicker your viscosity, the more pressure you will need to atomize your coating. For highest efficiency, use the lowest pressure that produces the best atomization and finish results. If you experience "Orange Peel", increase the pressure. If you have too much overspray, decrease the pressure.



Precision 6 PRO with 7600 Spray Gun

High Power 6-Stage Turbine

110 - 120 volts, 60Hz

13 amps, 1.85 H.P

220 - 240 volts, 50Hz,

8 amps 1.75H.

Dual air filtration

Single spray gun

Weight: 31lbs (14.1kg)

Height: 12" (30.48cm)

Width: 8.5" (21.6cm)

Length: 15" (38.1cm)

All EU units shipped



All 120 volt units are tested and certified



The Precision-6 PRO also has four patented features:

1. **Filter warning system** - The filter warning system works to help prevent overheating your motor by warning you when the filters are not allowing ample cooling air to the motor. To prevent damage to the motor the turbine will shut itself down if it gets too hot. If your turbine filters get dirty the unit will tell you by displaying “**Chk Fltr**” in the LCD screen. This means you need to check your filters immediately in order to prevent the unit from overheating. Overheating can be caused by partially clogged or dirty filters. The more the filters are restricted the hotter the motor will run. Once the OverHeat™ point has been reached the motor will shut off until the temperature inside the case has cooled enough for the motor to once again operate normally. When this happens an “**OverHeat**” message is displayed in the LCD screen. Do not ignore this warning. Clean or change your filters to prevent this from happening again.
2. **Hour meter** - The hour meter records the use of the turbine in 1/10th of an hour increments. To see how many hours of use your turbine has, turn the power control knob counter-clockwise until the indicator mark on the knob lines up with the line for the hour meter. The LCD will then display the hours of use rather than the pressure.
3. **PowerPause™ Mode** - When your turbo system is turned on with the spray gun and hose connected and you do not pull or release the trigger on the spray gun for more than 60 seconds the motor will drop into “**PwrPause**”, which is displayed in the LCD screen. An intermittent warning signal will start when the unit has been running for 50 seconds without the trigger being pulled on the spray gun. This signal will become solid at 55 seconds. If you don't release the trigger before 60 seconds the unit will go into PowerPause™ and the pressure will drop. This is a safety feature built into your PRECISION-6 PRO in order to keep the motor running cool and increase the life expectancy. In order to take your PRECISION-6 PRO out of PowerPause™ simply pull or release the trigger on the spray gun and the unit will immediately return to the preset pressure you set prior to PowerPause™. Normal triggering of the spray gun at the end of each pass will prevent the turbo system from entering PowerPause™.
4. **ShutDown™ Mode** - This mode will shut down the power to your motor when the unit has been in PowerPause™ mode for 15 minutes. The LCD screen will remain lit with “ShutDown” displayed in the screen. This will only occur if the motor has been running in PowerPause™ for 15 minutes. To exit ShutDown mode all you need to do is cycle the power switch on and off once and the unit will turn back on to the preset pressure, providing you haven't moved the control knob. We suggest that when you are done using the system, you leave it running in PowerPause™ mode until the unit shuts off. This will cool the motor much faster than just turning off the power and letting the heat radiate into the steel case.

*All turbine pressures quoted are measured sealed and at the motor outlet. Actual spraying pressures will vary depending on the model and size of the turbine.

4 Know Your Coatings

4.1 Coating Properties

Automotive coatings are formulated with specific resins and additives to provide durability, chemical resistance, and a high-quality finish. Different resin types influence adhesion, flexibility, gloss level, and overall performance. It is crucial to select the appropriate coating for the intended application to achieve the best results. Paint manufacturers carefully control resin solids content, viscosity, flow-out properties, and drying times to optimize performance. Many products allow for adjustments, such as slowing down or accelerating drying times, using catalysts to enhance durability, or adding reducers for proper spray consistency.

Since HVLP Electric Painting Systems generate warm air, it is essential to use a slower reducer than typically recommended for your spraying temperature to ensure proper leveling and prevent premature drying. While paint manufacturers provide general thinning guidelines, these recommendations may not account for all spray equipment types. To achieve the best possible basecoat and clearcoat results, the painter must understand fluid viscosity, air pressure, and gun setup when using an HVLP system. Testing and fine-tuning the setup before full application ensures consistent atomization and an even, high-quality finish.

4.2 Your Choice of Coatings and Viscosity

When using an HVLP Electric Painting System for automotive applications, always follow the paint manufacturer's guidelines for mixing and preparation. Unlike traditional compressed air systems, HVLP turbines naturally produce warm air. To compensate, it is essential to use a slower reducer than recommended for your spraying temperature to prevent the paint from tacking off too quickly. This adjustment ensures proper flow and leveling, allowing for a smooth, even finish.

For optimal results, a 5 or 6 stage turbine system is necessary to achieve a high-quality clear coat finish straight off the gun. Lower-stage turbines may not provide sufficient atomization for clearcoats, resulting in excessive texture or the need for additional polishing.

Chart A - Nozzle, Needle and Air Caps For 7600 Series Spray Guns

TIP/NEEDLE SIZE	APPLICATION	AIR CAP
0.5MM (.197)	Spot repair and panel blends	CC
0.8MM (.031)	Auto base and most clearcoats	B-HS
1.0MM (.039)	Auto single stage	B-HS
1.3 MM (.051)	Auto single stage	B-HS
1.5MM (.059)	Thinned primers	B-HS
1.8MM (.07)	High build primers	C-HS
2.0MM (.079)	High build primers	C-HS

5 Record Of Turbine Use

Record Of Turbine Use		
Model	Serial #	Date Purchased
Date	Hours Of Use	Total Hours

Turbine Recommended Maintenance: Clean and/or change pre-filters and/or cartridge filters every 50 hours or when necessary. See Accessories Page for appropriate filter replacement for your model.

6 Record Of Turbine Maintenance

Record Of Turbine Maintenance	
Date	Maintenance Performed

7 Turbine Maintenance and Cleaning

CAUTION

Always unplug your turbine from the main electrical supply before doing any maintenance or repairs.

After Each Use:

Your Apollo turbine system requires very little maintenance. The turbine motor has sealed bearings that are lubricated for life. The only maintenance that you will need to perform is checking, cleaning and replacing your filters and pre-filters as required. You should check your filters every 10 hours and replace as necessary. It is very important that your motor has cool, clean air to operate efficiently. If you maintain your filters and prefilters well, you will enjoy many years of long service from your turbine motor.

NOTICE

Always use genuine Apollo filters and pre-filters. Other types of filters and pre-filters may prevent proper air flow to the motor, resulting in premature motor failure and voiding your warranty.

7.1 Pre-Filter Maintenance

We recommend that you remove your pre-filters after each use. To remove the pre-filters: push your finger between the filter and pre-filter until you can curl it up and pull the pre-filter off, rotating your finger around the pre-filter as you pull. Do not pull hard as you will break the glue line on the pre-filter. Make sure you check both pre-filters as they can get dirty at different intervals. If they appear to be a little dirty or clogged, you can wash them out using a mild soap and warm water. If they are not cleanable you need to install new pre-filters.

To reinstall the pre-filters, hold one in both hands and apply the top first, moving your fingers around the inside as you slide it back over the filter cartridge from top to bottom. NEVER operate your turbine without both filters and pre-filters installed and clean.



7.2 Filter Maintenance

Visually check your filters every 10 hours and when you remove your pre-filters for cleaning. Check for accumulated material in the filter element. If you suspect they may be dirty, or if you can see material building up, don't take a chance, remove the filter and hold it up to the light.

To remove your filters, remove two dome nuts as shown in picture 1 and pull filter plate off as shown in picture 2. Filter plate can hang up on the threads so make sure you pull it off straight. Remove filter as shown in picture 3. If filter is stuck to the side of the case, gently tap them with your hand.



To check your filters, hold them up to a light, similar to your car air intake filter. If you cannot see light through more than 50% of the filter, replace filter element.

NOTICE

Filter element may be damaged if more than 50 PSI of air pressure is used to blow out filter element.

If they appear to be dirty, you can tap them gently on a flat surface to remove any debris. If you have compressed air available, you can also blow them off with air. If you use compressed air to clean your filters, make sure you blow the air from the inside out and never use more than 50 PSI or this will damage the filter element.

To reinstall the filters, reverse the instructions above. Make sure that you line the filter up with the filter plate first, this will help to keep it straight when replacing the dome nuts.

7.3 IMPORTANT Brush Maintenance

For the longevity of the motor carbon brushes MUST be replaced every 200-300 running hours. Motor warranty will be voided if brushes are not replaced within 400 running hours. Arrange for service at designated Apollo service center at <https://hvlp.com/warranty-non-warranty-repair-request/> or call (888) 900-4857.

8 Running Multiple Spray Guns with A Turbine

All current Apollo Turbine Models have one air hose outlet on the side of the unit and are designed to run one spray gun. These models are equipped with an internal air relief valve to accommodate a non-bleed style spray gun (Apollo Model 7700).

It is possible to run a 6-stage turbine system with two spray guns at the same time by installing an optional “Y” Connector, to the turbine outlet port. It is important to note that if the “Y” Connector is installed and only one spray gun is operated, the 2nd outlet must be capped or closed so that performance to the single spray gun will not be affected. To install a “Y” connector follow these instructions:

1. Unscrew the female quick connect from the air outlet located on the side of your turbine.
2. Screw on the “Y” connector. Make sure the “Y” is sideways so you can easily attach your hoses.
3. Screw the female quick connect you removed from your turbine onto the “Y” connector. If you plan on using two spray guns right away, then make sure you have a 2nd quick connect installed on the other side of the “Y” connector.
4. You are now ready to connect your air hoses and spray guns.

Remember, we do not recommend using the “Y” connector with turbines smaller than 4 or 5-stages. This is due to the power that each model has. The more stages you have the more power you have. When you are running two spray guns on a single turbine you are splitting the air power that turbine has. While you will not divide it equally, you will reduce it considerably, so make sure you do some test areas before you start on your project.



“Y” Connector with single hose and cap



“Y” Connector with two hoses

9 Limited Warranty

2 + 3 Year Limited Warranty

All PRECISION-6 PRO paint spray system is WARRANTED by APOLLO SPRAYERS INTERNATIONAL, INC. for a total period of TWO YEARS from the ORIGINAL date of purchase by the ORIGINAL PURCHASER. Proof of purchase to be included and all SHIPPING CHARGES to be pre-paid.

All PRECISION-6 PRO system warranties can be extended by an additional 3-years by registering your purchase using our online registration page located at www.hvlp.com/warranty-registration/ within 30 days of your purchase giving you a total of 5-years limited warranty.

APOLLO SPRAYERS INTERNATIONAL INC., upon examination of the machine/equipment will replace or repair at their discretion any defects in material or workmanship.

This WARRANTY DOES NOT include misuse, damage, neglect, alterations, disassembled equipment or modifications, lack of maintenance, cleaning, water damage to electrical parts, INCORRECT VOLTAGE CONNECTION.

This Warranty is in lieu of all other express warranties, any WARRANTY implied by law, including but not limited to, implied Warranties of merchantability or fitness, is excluded to the maximum extent permitted by law and, if not excludable, is limited to the duration of the express Warranty.

No representative or person is authorized to extend this Warranty or to create for APOLLO SPRAYERS INTERNATIONAL, INC. any other liability in connection with the sale of any APOLLO SPRAYERS product. APOLLO SPRAYERS INTERNATIONAL, INC. shall not be liable for any consequential, incidental, or special damages of any kind directly or indirectly resulting from breach of any express or implied warranty.

Some states do allow the exclusion or limitation of incidental or consequential damages or limitations on the length of any Warranty so that the above limitations and exclusions may not apply to you: however, to the maximum extent permitted under applicable law, the only rights and remedies shall be to obtain a replacement for any defective product.

This Warranty gives you specific legal rights and you may also have other rights which vary from State to State.

Apollo Sprayers International, Inc.

1030 Joshua Way, Vista, CA 92081

Customer Service: (760) 727-6226

Fax: (760) 727-9325

Toll Free Sales: (888) 900-HVLP (4857)

www.maxi-miser.com

www.hvlp.com

 **WARNING:**

This product can expose you to chemicals including Chromium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.